

STEERING WHEEL CONTROL INTERFACE FOR OPEL/VAUXHALL VEHICLES

42XVX007-0



INSTALLATION GUIDE

The 42XVX007-0 allows for the retention of the steering wheel controls as well as other vital features when installing an aftermarket unit into the vehicle. This interface features selectable dipswitches for dedicated applications, simply refer to the provided table for the correct configuration ensuring seamless integration.

VEHICLE APPLICATION

Dacia

Dokker (SD) 03/2017 - 11/2020
Dokker Stepway (SD) 03/2017 - 11/2020
Duster (SR) 01/2018 - 07/2021
Lodgy (SD) 03/2017 - 01/2022
Lodgy Stepway (SD) 03/2017 - 02/2022
Logan MCV (SD) 11/2016 - 09/2020
Logan MCV Stepway (SR) 05/2017 - 09/2020
Sandero (SD) 11/2016 - 09/2020
Sandero Stepway (SD) 11/2016 - 09/2020

Fiat

Talento (ZAF 296) 07/2016 - 10/2021

Nissan

NV300 (4/J4) 11/2016 - 06/2019
NV300 (4/J4) 06/2019 - 09/2021
NV300 (4/J4) 05/2021 - 09-2021
NV400 (M) 08/2014- 07/2020
NV400 (M) 07/2020 - 12/2021
Primastar (4/J4) 09/2021 - 2024

Opel

Movano B (X62) 10/2013 - 09/2019
Movano B (X62) 10/2019 - 08/2021
Vivaro B (X82) 06/2014 - 01/2019

Renault

Captur (R) 06/2013 - 03/2017
Captur (R) 03/2017 - 12/2019
Express (RJK) 05/2021 - 2024
Kangoo (W) 03/2013 - 12/2020
Kangoo Rapid (W) 05/2013 - 05/2021
Kangoo Z.E. Rapid (W) 05/2013 - 06/2022
Kangoo III (RJK) 05/2021 - 2024
Master III (M) 09/2014 - 08/2018
Master III Z.E. (M) 06/2018 - 06/2020

Renault

Master III (M) 10/2019 - 2024
Trafic III (L/JL) 09/2014 - 07/2019
Trafic III (L/JL) 09/2019 - 03/2022
Trafic III (L/JL) 05/2021-2024
Twingo (AH) 09/2014 - 04/2019

KEY FEATURES

- RETAIN STEERING WHEEL CONTROL FUNCTIONALITY
- REPLACE FACTORY RADIO
- SOFTWARE UPDATEABLE
- REMAPPABLE BUTTONS

PRIOR TO INSTALLATION

Installation requires a certain level of technical knowledge. Prior to installation, it is important to read the manual. Select a location for installation that is dry and free from heat sources. It is essential to use the correct tools during installation to prevent any damage to the vehicle or the product itself. Please note that we cannot be held liable for any issues arising from improper installation.

Before proceeding with installation, disconnect the negative battery terminal and ensure the key is removed from the ignition.

WIRING KEY

ISO CONNECTOR WIRING KEY

Purple Right Rear Speaker +
Purple/Black Right Rear Speaker -
Green Left Rear Speaker +
Green/Black Left Rear Speaker -

Grey Right Front Speaker +
Grey/Black Right Front Speaker -
White Left Front Speaker +
White/Black Left Front Speaker -

Yellow Permanent 12V
Black Ground
Red Ignition 12V
Orange Illumination

FLYING WIRE WIRING KEY

Pink Speed Pulse - 0 to 12V Square Wave @ 1Hz/Kph
Green Park Brake

Purple/White Reverse Gear - 250mA
Orange Illumination - 250mA

Red/White Acc 12V - 250mA
Yellow RCA Camera

OUTPUTS & RATINGS

Standby Current <3mA

Operating Voltage 6V to 16V

Operating Temperature -20C to 85C
*rated at 25 degrees Centigrade

DIPSWITCH CONFIGURATION


MANUFACTURER	SYSTEM	DIPSWITCH CONFIGURATION				CONNECTION
		1	2	3	4	
RESERVED	NA	OFF	OFF	OFF	OFF	SOFTWARE UPDATE MODE
AERPRO	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
ALPINE	IR DATA	OFF	ON	OFF	OFF	MALE 3.5MM JACK
ANALOG SINGLE EXTEND	Analog	ON	ON	ON	ON	BROWN SWC IR
ANALOG SINGLE WIRE	Analog	ON	ON	ON	OFF	BROWN SWC IR
CLARION	IR DATA	ON	OFF	OFF	ON	MALE 3.5MM JACK
CUSTOM	IR DATA	ON	OFF	ON	OFF	HEAD UNIT PENDANT
GRUNDIG	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
JVC	IR DATA	OFF	OFF	ON	OFF	BROWN SWC IR
KENWOOD 1	IR DATA	ON	OFF	OFF	OFF	BROWN SWC IR
KENWOOD 2	IR DATA	ON	ON	OFF	OFF	BROWN SWC IR
KEY 1 / KEY 2	Analog	OFF	ON	ON	OFF	KEY1 / KEY 2 WIRES
KEY 1 / KEY 2 EXTEND	Analog	OFF	ON	ON	ON	KEY1 / KEY 2 WIRES
PHILIPS	IR DATA	OFF	ON	OFF	ON	BROWN SWC IR
PIONEER 1	Analog	OFF	OFF	OFF	ON	MALE 3.5MM JACK
PIONEER 2	Analog	OFF	OFF	ON	ON	MALE 3.5MM JACK
SONY	Analog	ON	OFF	ON	ON	MALE 3.5MM JACK
ZENEC	IR DATA	ON	ON	OFF	ON	BROWN SWC IR

DIPSWITCH 5 & 6


Dipswitch 5 & 6 are reserved for vehicle specific configuration.

KEY1 and KEY2	KEY1 and KEY2 are specifically tailored for analog learning mode-style radios. Our SWC module is designed with a resistor chain that precisely matches the required resistance for seamless compatibility with this type of head unit.
KEY1 and KEY2 EXTEND	This mode extends every button press to 2 seconds during the learning process. However, with roll wheel-designed steering wheel buttons, holding for 2 seconds isn't feasible. Our KEY1 and KEY2 extend feature addresses this by automatically prolonging each press, simplifying head unit programming even in such scenarios. Extend mode is not intended for normal use, it is only used in the teaching process.
ANALOG SINGLE WIRE and ANALOG SINGLE WIRE EXTEND	This function operates similarly to KEY1 and KEY2 but transmits all unique values through the IR SWC single wire. This is crucial for compatibility with learning-style head units featuring only one learning input wire. To ensure compatibility, we've incorporated this feature into our steering wheel control interface, ensuring seamless operation across various head unit setups. The Analog Extend mode functions identically to its counterpart within the KEY1 and KEY2 system but transmits through a single wire.


SWC INTERFACE

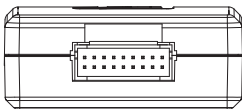


18 PIN HARNESS CONNECTOR

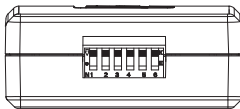

DIPSWITCHES

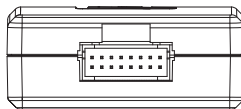

16-PIN HEAD UNIT CONNECTION LEAD

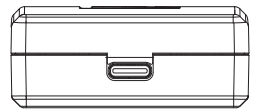

USB-C


CONNECTION GUIDE

BEFORE INSTALLATION

Prior to installing the interface, it is essential to remove and disconnect the factory stereo. For guidance on this process, please refer to the vehicle owner's manual/handbook or seek assistance from a professional.

SETTING THE DIPSWITCHES

This interface includes a set of dipswitches. Consult the dipswitch selection guide to select the appropriate configuration. To activate a dipswitch, press it downward into the 'ON' position. Refer to the diagram for an example of the 'KENWOOD' dipswitch configuration.

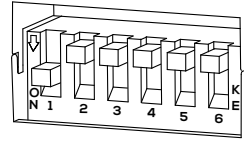

INSTALLATION

1. Take the interface, then connect the 16-PIN head unit connection lead and the 18-PIN steering wheel harness connectors to their respective ports.
2. Connect the head unit connection lead to the steering wheel remote input on the rear side of the aftermarket stereo. Connection methods vary based on the stereo brand, utilising either a 3.5mm jack connector SWC IR wire or wired inputs KEY1 and KEY2. *For specific connection guidance, refer to your aftermarket stereo's installation manual if not clearly labelled on the stereo harness.*
3. Connect the power/speaker ISO connector from the interface to the corresponding power/speaker ISO connection on the aftermarket stereo. *For aftermarket stereos lacking an ISO connector, refer to the "Wiring Key" on Page 2 for guidance on connecting wires. Certain interfaces may also include extra "flying" wires for additional functionalities such as parking brake trigger, reverse gear, and speed pulse. Further information on these wires is available in the "Flying Wire Wiring Key" section.*
4. Connect the vehicle-specific connectors from the interface harness to the corresponding connectors on the vehicle harness.
5. Connect the flying wires on the harness to the rear of the stereo (iff applicable).
6. Connect the antenna adapter to the vehicle's existing connection at the rear of the aftermarket stereo.
7. When installing an aftermarket reverse camera, connect the yellow RCA from the harness to the yellow RCA of the aftermarket camera. (If supported by the interface and vehicle)
8. When installing a DAB antenna, ensure to connect the DAB aerial connector to the rear of the new stereo.
9. After connecting all wires (along with any additional accessories), it's crucial to thoroughly test the stereo and steering wheel controls before reassembling the dashboard. If steering wheel controls are unresponsive, inspect connections and check dipswitch settings. Repeat the connection process if necessary, following the outlined steps.

STEERING WHEEL CONTROL CONFIGURATION


<p>STYLE 1 NO PHONE BUTTONS DIP 5 & 6 = OFF</p> <p>C D (REAR SCROLL WHEEL)</p> <p>A = VOLUME UP B = VOLUME DOWN C = TRACK UP D = TRACK DOWN E = SOURCE F = MUTE</p>	<p>STYLE 2 PHONE & VOICE ICONS DIP 5 = ON DIP 6 = OFF</p> <p>C D (REAR SCROLL WHEEL)</p> <p>A = VOLUME UP B = VOLUME DOWN C = TRACK UP D = TRACK DOWN E = SOURCE F = MUTE G = PICK UP/HANG UP</p>	<p>STYLE 3 PHONE ICON TOP DIP 5 = OFF DIP 6 = ON</p> <p>C D (REAR SCROLL WHEEL)</p> <p>A = VOLUME UP B = VOLUME DOWN C = TRACK UP D = TRACK DOWN E = SOURCE F = MUTE G = PICK UP/HANG UP</p>	<p>STYLE 3 PHONE ICON MUTE DIP 5 = ON DIP 6 = ON</p> <p>C D (REAR SCROLL WHEEL)</p> <p>A = VOLUME UP B = VOLUME DOWN C = TRACK UP D = TRACK DOWN E = SOURCE F = MUTE G = PICK UP/HANG UP</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

BUTTON REMAPPING


The steering wheel buttons listed offer the flexibility of being re-configured or assigned dual functions. The availability of these buttons depends on the specific vehicle to which the interface is being installed and if the aftermarket radio supports them. In addition to button remapping, we offer the option to assign dual functions to each button on the steering wheel. This means that every button can be programmed to execute both a short press command and a long press command. You can also add your own bespoke configuration. Button configuration can be done by PC, MAC and smart phone via the USB port. Button Remapping instructions can be found in a separate guide on our website.

CONNECTION DIAGRAM

HEAD UNIT CONNECTION LEAD

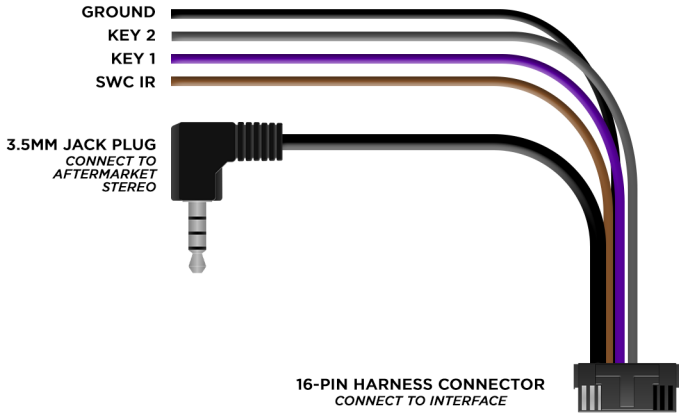

SWC INTERFACE

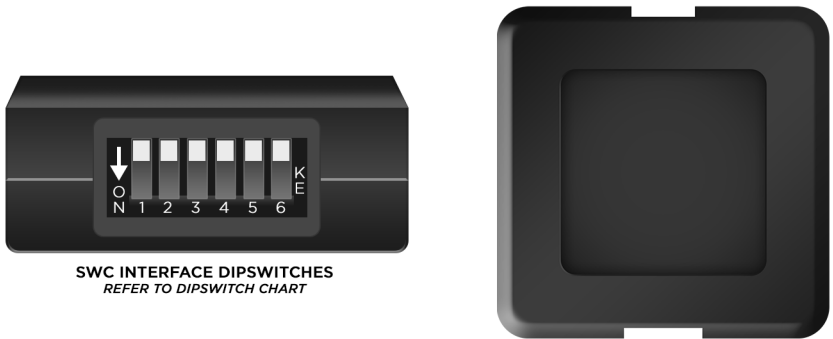

SWC VEHICLE HARNESS

