


UNIVERSAL 1DIN KIT

- Kit content:**
- 1DIN metal cage;
 - Metal brackets;
 - 1DIN plastic frame;
 - Screws;

Compatibility: SPH-EVO950DAB; SPH-DA97DAB; SPH-EVO98DAB; SPH-EVO107DAB

Customer code: CA-HM-UNI-E950.001

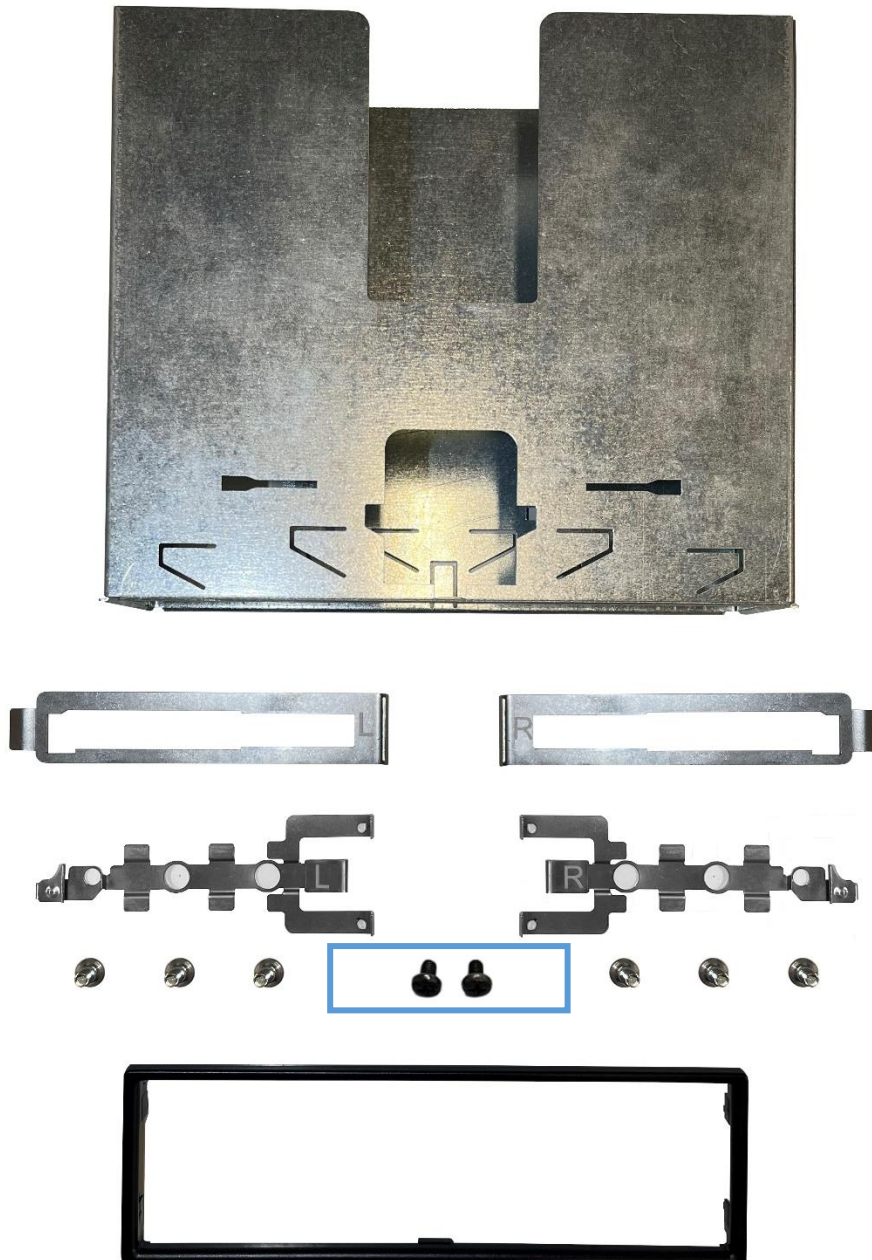


INSTALLATION MANUAL

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.
07/2024 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.



Installation example with universal 1Din aftermarket kit:

1)

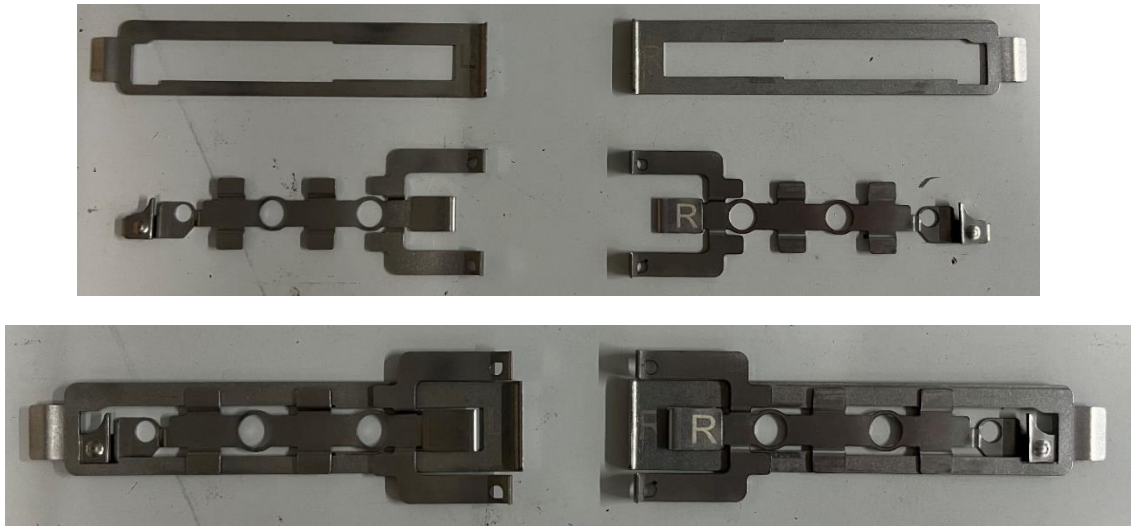

1) Assemble left and right spring brackets together as shown in the picture.



2)

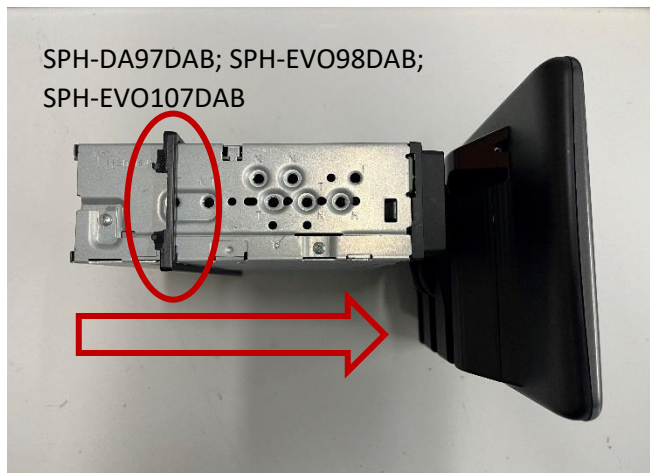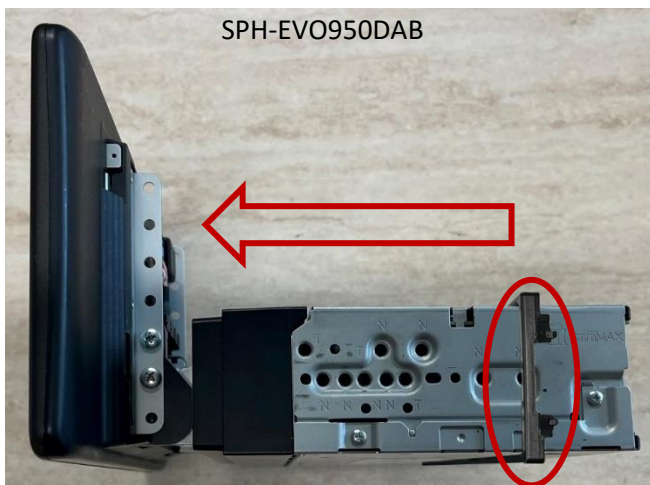

2) Slide the plastic frame into the radio silver box.





- 3) Use the **black screw** to create a shim (1 on each side as shown), so that the spring brackets do not sag. **ATTENTION:** Perform this procedure only for compatibility with SPH-EVO950DAB.

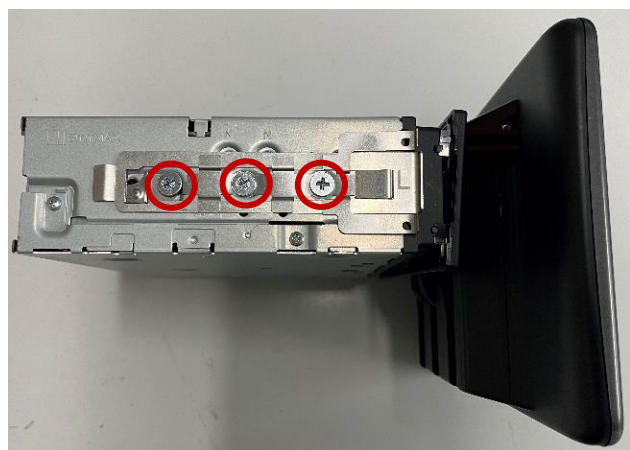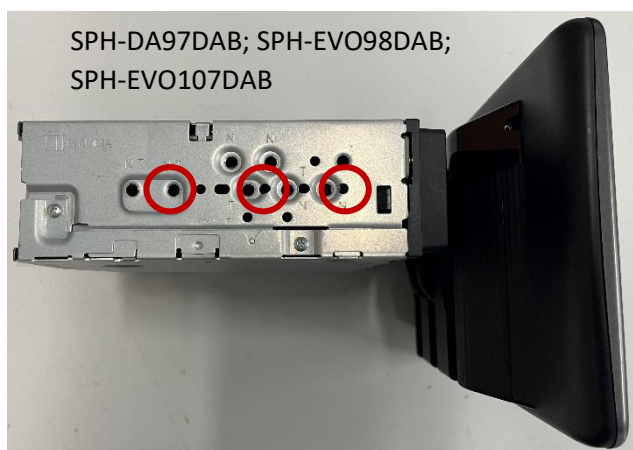

- 4) Now fix the left and right spring brackets on the silver box with the supplied silver screws (3 on each side), as shown in the pictures.

5)

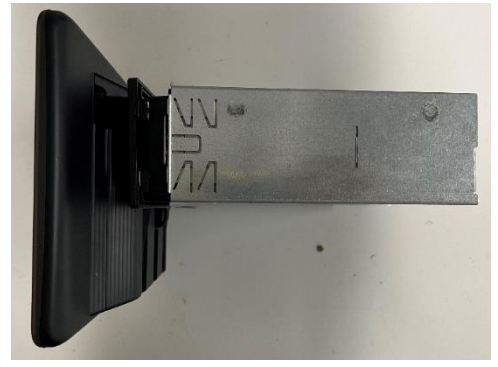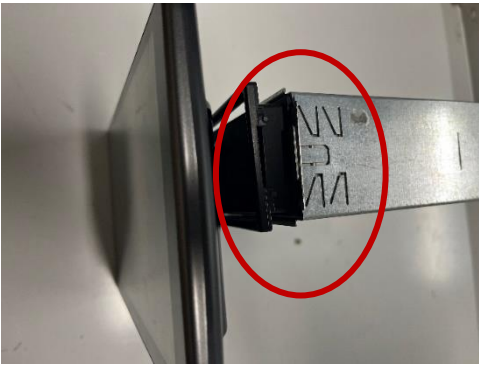

5) Slide the unit into the metal cage until it's locked, then lock the plastic frame.

Kit removal:

In case the unit needs to be removed, pull the trim off and open the spring brackets with the use of a screwdriver.



ATTENTION!

The metal cage was pre-assembled in the car;
the depiction in the photo is only to explain