



Chevrolet Spark 2013-2015

KIT FEATURES

- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- Painted matte black

KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • C) Pocket • D) (4) #8 x 3/8" Phillips screws • E) (10) Panel clips • F) Axxess interface and wiring harness (not shown)

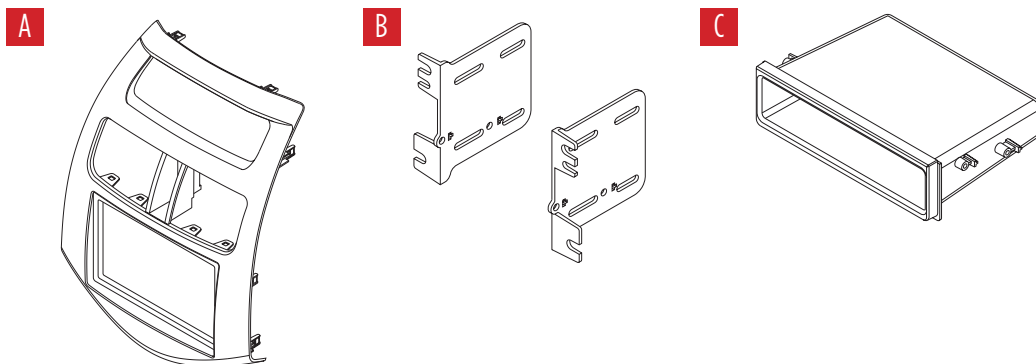


TABLE OF CONTENTS

| | |
|--|-----|
| Dash Disassembly | 2 |
| Kit Preparation | 3 |
| Kit Assembly | |
| –ISO DIN radio provision with pocket | 4 |
| –ISO DDIN radio provision | 4 |
| Axxess Interface Installation | 5-9 |

WIRING & ANTENNA CONNECTIONS

Wiring Harness: Axxess interface included
Antenna Adapter: 40-EU55

TOOLS REQUIRED


- Panel removal tool • Phillips screwdriver

Attention! With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.


DASH DISASSEMBLY

1. Unclip and remove the radio trim panel. (Figure A)
2. Remove (4) Phillips screws securing the radio. Slide the radio out, then unplug and remove the radio. (Figure B)

Continue to kit preparation

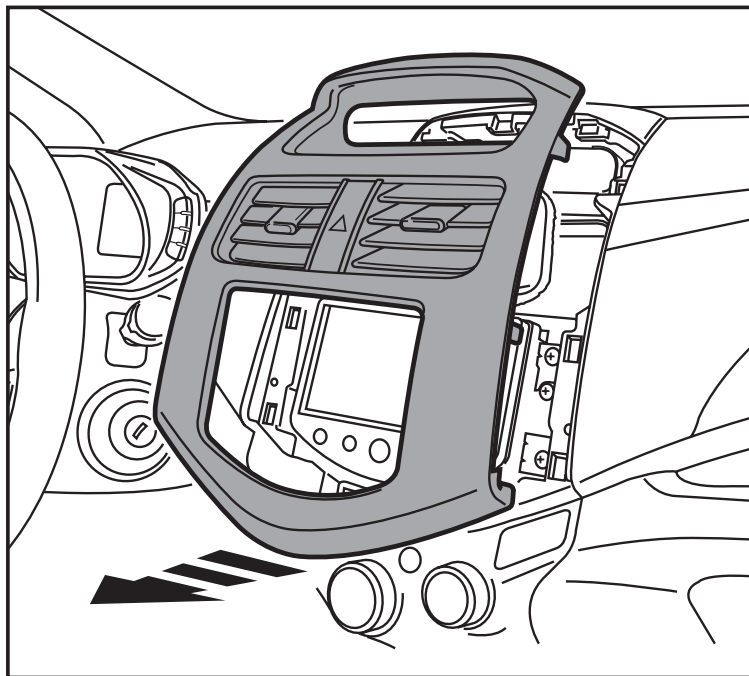

(Figure A)

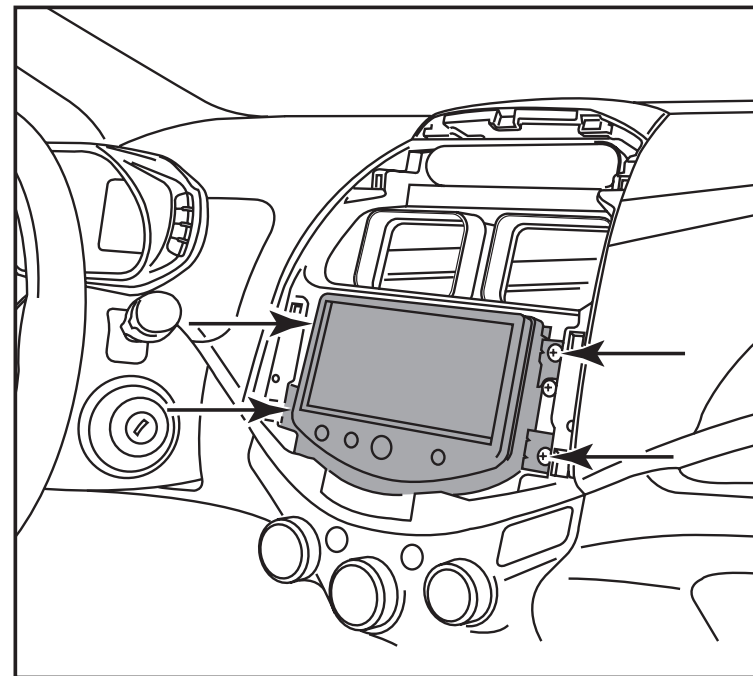


(Figure B)

KIT PREPARATION

From the factory radio trim panel:


1. Unclip and remove the vents from the factory panel. (Figure A)
2. Unclip and remove the hazard button from the trim panel. (Figure A)
3. Remove (5) Phillips screws securing the upper display shroud from the factory panel. (Figure A)

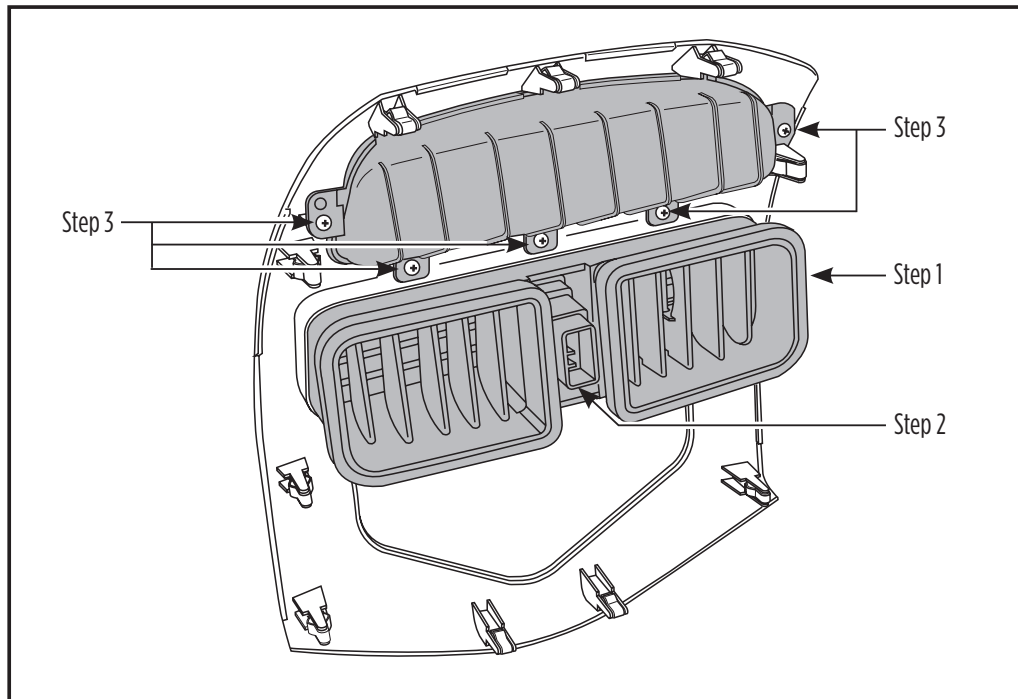

(Figure A)

To the 99-3309B-NE radio trim panel:

1. Clip in the factory vents and hazard button. (Figure B)
2. Secure the upper display shroud using the factory screws. (Figure B)
3. Attach the (10) panel clips provided.

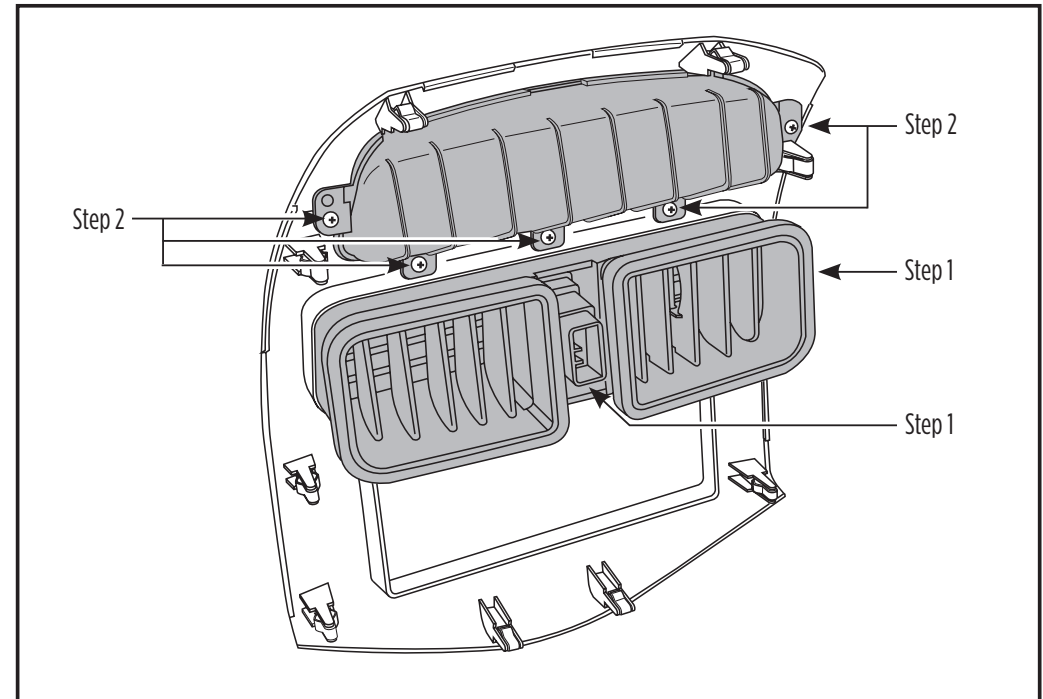


(Figure B)

KIT ASSEMBLY


ISO DIN radio provision with pocket

1. Secure the **radio brackets** to the **pocket** using the (4) #8 x 3/8" screws provided. (Figure A)
2. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
3. Slide the radio into the bracket/pocket assembly, then secure it using the screws supplied with the radio. (Figure B)

*Continue to Axxess
Interface Installation*

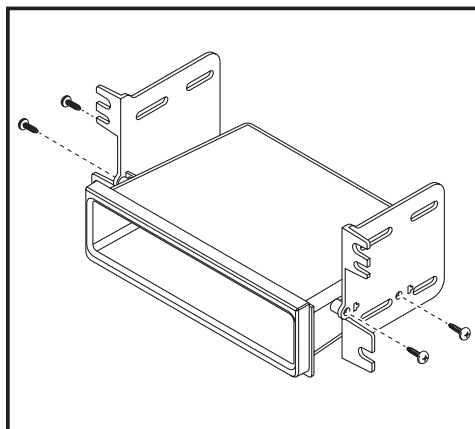

(Figure A)

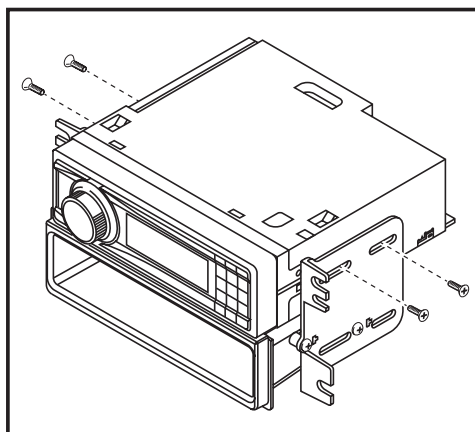


(Figure B)

ISO DDIN radio provision

1. Attach the **radio brackets** to the radio using the screws supplied with the radio. (Figure A)

*Continue to Axxess
Interface Installation*

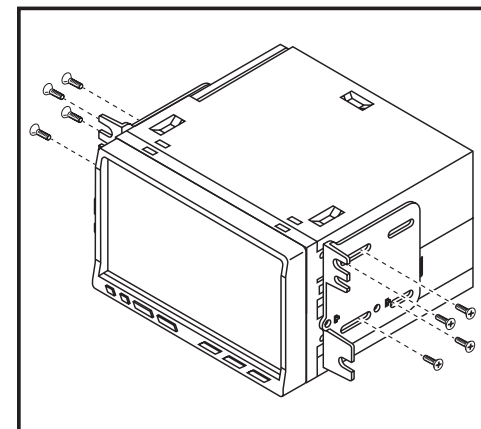

(Figure A)



99-3309B
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

386-257-1187



Or via email at:

techsupport@metra-autosound.com

Tech Support Hours (Eastern Standard Time)

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 7:00 PM

Sunday: 10:00 AM - 4:00 PM



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.edu or call 386-672-5771 for more information and take steps toward a better tomorrow.



**Metra recommends MECP
certified technicians**