



*...digital radio on the move*


## DAB-AR1 Alfa Romeo Fitting Guide

This fitting guide illustrates an example of how to fit this part number into its associated vehicle. This may vary from vehicle to vehicle within the range. The radios may also be different to the one illustrated in colour or shape. We recommend that AutoDAB is fitted by a professional fitter due to the potential proximity to air-bags and the complexity of extracting the radio.



**1** Open the glove compartment and remove the grommet which pops out. Unscrew the torques screw from inside.

**2** Taking care, unclip the panel and remove.

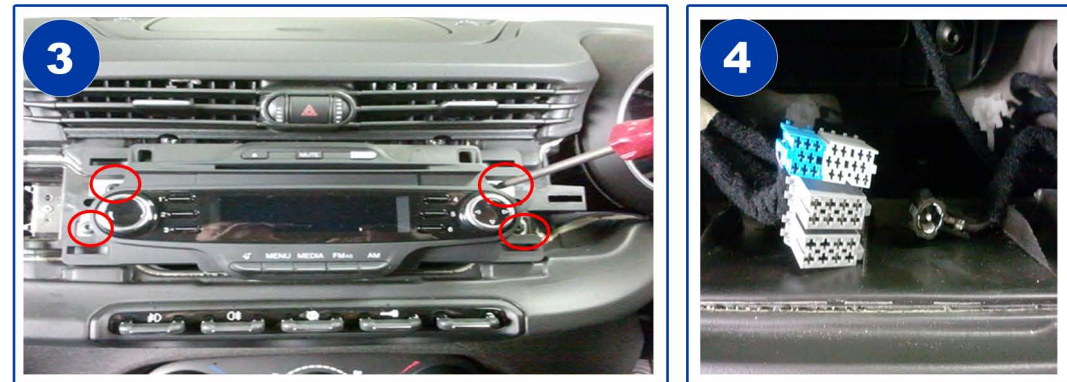

**3** Unscrew the four screws and remove the head unit.

**4** Connect the AutoDAB harness and antenna adaptor to the head unit and then to the vehicle wiring.

**5** Run the antenna cable through the vehicle to the back of the head unit aperture and connect to the AutoDAB module. Connect the AutoDAB module, ensuring that the power connector is plugged in last.

**6** Your AutoDAB installation is now complete. Reinstall the head unit.