


12.331088-04

Installation manual for:
Daihatsu Sirion II 2008 -->
Sabaru Justy 2008 -->

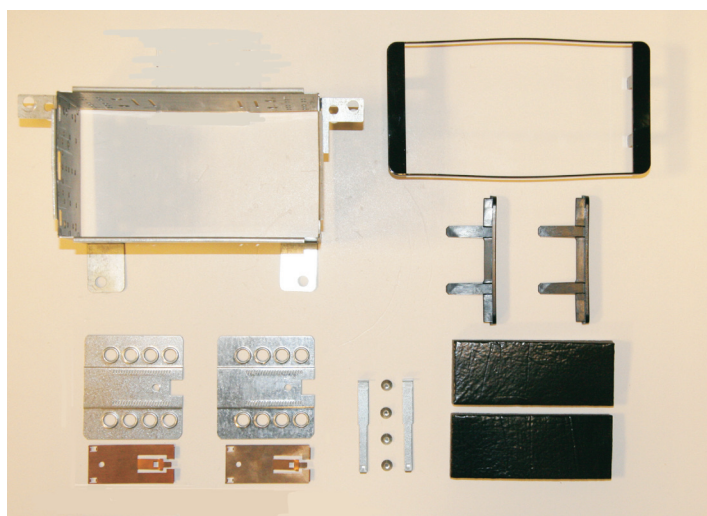

Installation kit includes the following items:

- * 1X 2-ISO 100 mm. metal bracket
- * 1X Replacement panel
- * 2X Mounting plates
- * 2X Mounting spacers
- * 2X Radio removal keys
- * 8X Screws
- * 2X Cushion

ALPINE
Mobile Media Solutions

clarion




KENWOOD
Listen to the Future

Pioneer


12.331088-04




Remove the bottom grey dashboard panel. This is tighten by Philips screws.

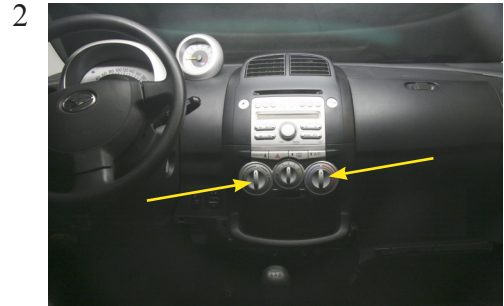

Remove the climate control buttons.

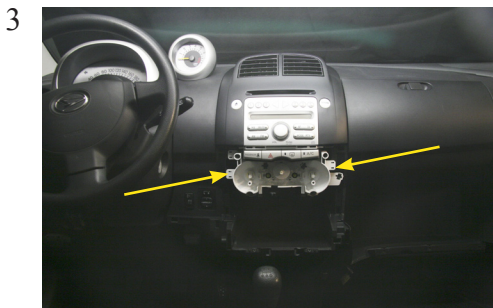

Remove the climate control unit.

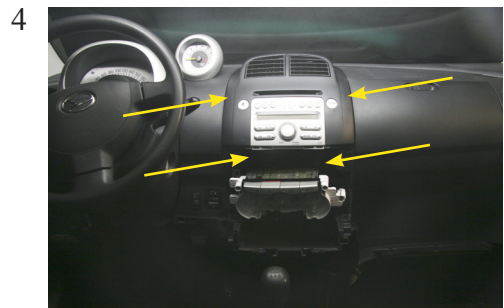

Remove two Philips screws at the position of the arrows.
Remove the top dashboard panel.





Place the 2-Din metal bracket.



Place the 2-Din headunit.





Replace all panels in reverse order.

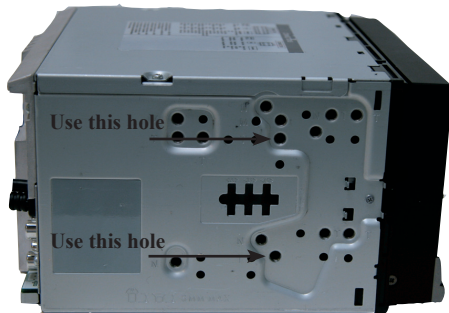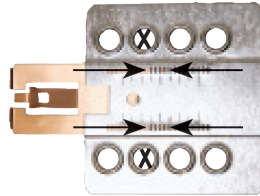

Alpine IVA-W205R

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

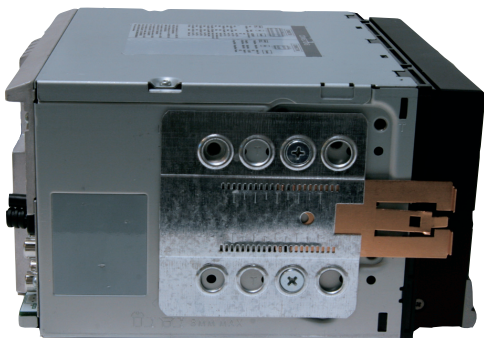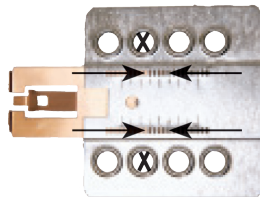



Alpine IVA-W205R

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.



clarion

EXAMPLE

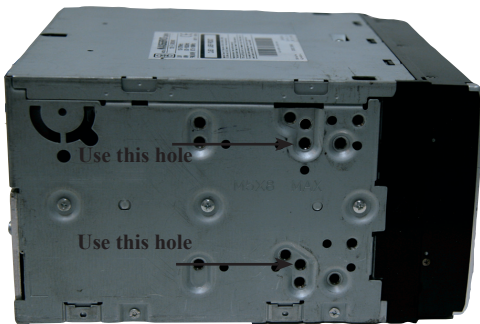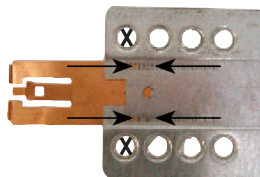

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 4 & 6 marked with an arrow.
Measured from left to right.

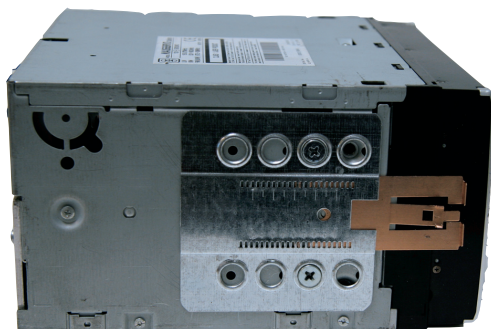
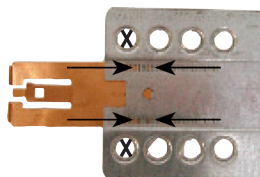


We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 4 & 6 marked with an arrow.
Measured from left to right.

KENWOOD



Listen to the Future

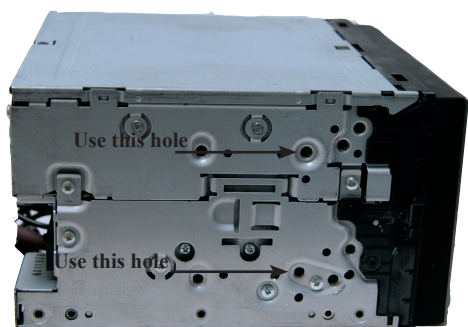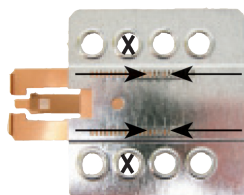

Kenwood DDX6029

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.

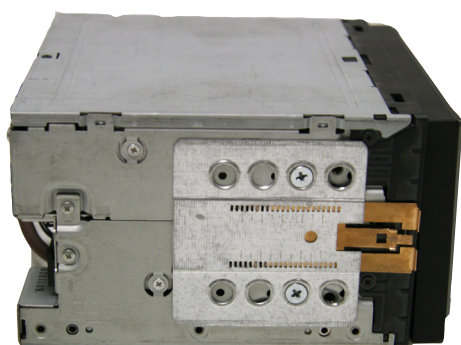
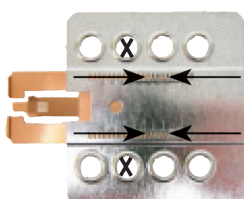


Kenwood DDX6029

We advice to use the following positions.
Other positions are also possible.

Use position 2 marked with a cross.
Use position 14 & 16 marked with an arrow.
Measured from left to right.



Pioneer

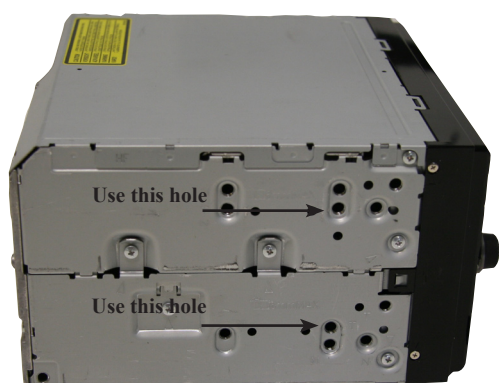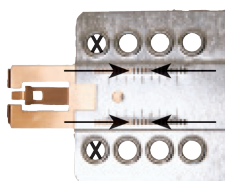

Pioneer HD1BT - Motorized

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.

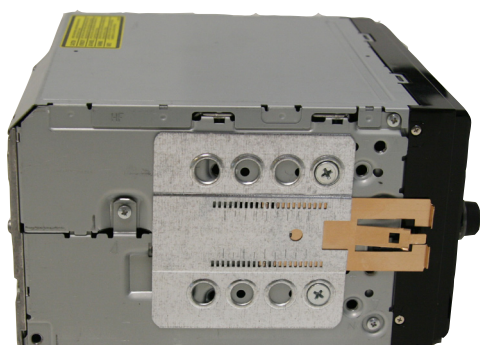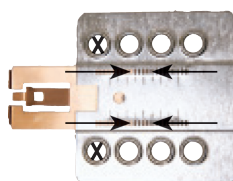

Pioneer Avic D3 - Non-motorized

We advice to use the following positions.
Other positions are also possible.

Use position 1 marked with a cross.
Use position 10 & 12 marked with an arrow.
Measured from left to right.